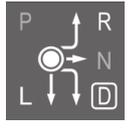
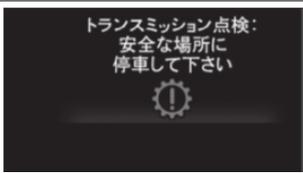


## Warning lights, Indicators and Messages GP5

Warning light	Name	Situation to light / blink	Information	Messages
	Brake warning light (Red)	<p>lit few seconds when power ON and then turn off (Lights up when parking brake applied)</p> <p>Lights when the brake fluid amount was reduced</p> <p>Lights when the brake system is abnormal</p>	<p>When this <b>lit while driving</b>, release the parking break and check the brake fluid level and if it is lower than minimum level, immediately get it checked by a Honda dealer</p> <p>If it is <b>lit with ABS</b> warning light, please immediately check with the Honda dealer. See - Brake warning light (red) is lit P.274</p> <p>If the <b>brake system warning light (orange)</b> lit at the same time, stop immediately at a safe place, please have it inspected at the Honda dealer.</p> <p>In this cases, the operation of the brake pedal becomes heavier, please firmly step on the brake pedal.</p>	<div style="background-color: black; color: white; padding: 5px; text-align: center;">             パーキングブレーキを解除して下さい   </div> <div style="background-color: black; color: white; padding: 5px; text-align: center;">             ブレーキ液量低下   </div> <div style="background-color: gray; color: black; padding: 5px; text-align: center;">             Low Brake Fluid           </div> <div style="background-color: black; color: white; padding: 5px; text-align: center;">             ブレーキシステム点検   </div> <p style="text-align: center;">Abnormal Brake System</p>
	Oil pressure warning light	<p>ON when power mode ON, then turns off when engine starts</p> <p>Turns ON when the oil pressure inside the engine reduced</p>	<p>Immediately stop the car in a safe place.</p>	<div style="background-color: black; color: white; padding: 5px; text-align: center;">             エンジン油圧異常   </div>
	PGM-FI warning light	<p>ON when power mode ON, then turns off when engine starts</p> <p>Lights When there is an abnormality in the engine exhaust gas control system</p> <p>Flashes when it detects a misfire of each engine cylinder</p>	<p><b>Lights while driving</b> Please immediately check in with the Honda dealer Avoid high-speed running.</p> <p><b>Flashing while driving</b> Stop at a safe place without combustibles. Please wait and cool down the car by turning OFF the power mode more than 10 minutes</p>	<div style="background-color: black; color: white; padding: 5px; text-align: center;">             エンジンシステム点検   </div>

Warning light	Name	Situation to light / blink	Information	Messages
	12V battery charge warning light	ON when power mode ON, then turns off when engine starts.  Lights when 12V battery is not charged	<b>Lights while driving</b> In order to reduce the consumption of electricity, turn OFF air condition, audio and such	
	Transmission warning light	Blinking when the shift position selected is abnormal  There is a case where all of the shift position is flashing at the same time	If the <b>D flashes</b> while driving, avoid sudden acceleration, please immediately received a check in the Honda dealer.  If the shift position <b>other than D blinks</b> during operation, please stop the car immediately safe place. Please have it inspected at the Honda dealer.	  
	Seat belt non-wear warning light	Lights when not wearing seat belt in the driver's seat and passenger seat	If the seat belt wear properly, buzzer, warning light will turn off.  If you are even wearing a seat belt correctly warning lamp is lit, factors such as sensors of false positives are possible. Seat belt reminder P.29	 

Warning light	Name	Situation to light / blink	Information	Messages
	ABS (Anti lock brake System) warning	ON when power mode ON, then turns off when engine starts  Lights when the ABS system abnormal	When lit, please immediately receive a check in the Honda dealer. ABS (anti-lock brake system) P.197	
	Air bag system warning light	ON when power mode ON, then turns off when engine starts  Lights up when detects the Abnormalities of the air bag system  Abnormalities of the pre-tensioner system	If <b>constantly lit</b> , or it is <b>not illuminated at all</b> , please immediately receive a check at the Honda dealer.	
	Brake system warning light (orange)	ON when power mode ON, then turns off when engine starts  Lights when electric servo system or Hill start assist system is abnormal  Is lit at the time of the City brake active system abnormal	When <b>lit during operation</b> , please immediately receive a check in the Honda dealer.  Note that the performance of the regular brake function is secured even if the light is lit  When <b>City brake active system indicator lit at the same time</b> , it means City brake active system has failed. Please have it inspected by Honda dealer. City brake active system ♣ P.200	  

Warning light	Name	Situation to light / blink	Information	Messages
	VSA (Vehicle Stability Assist) warning light	ON when power mode ON, then turns off when engine starts  Blinking when VSA is working  lights up when any of the VSA system is abnormal	When <b>lit during operation</b> , please immediately received a check in the Honda dealer.  Note that the performance of the regular brake function, even if the lights are secured.  VSA (Vehicle Stability Assist) P.192	
	VSA OFF warning light	ON when power mode ON, then turns off when engine starts  Lights when the VSA to OFF	VSA (Vehicle Stability Assist) P.192	
	Honda Smart Key system warning light	ON when power mode ON, then turns off when engine starts  Lights when the system is abnormal	Please have it inspected by Honda dealer	
	EPS (electric power steering) system warning light	ON when power mode ON, then turns off when engine starts  EPS lights that there is an abnormality in the function of the electric power steering system	If <b>constantly lit</b> , or it is <b>not illuminated at all</b> , please immediately received a check in the Honda dealer.  EPS (electric power steering) system warning light is lit P.274	

Warning light	Name	Situation to light / blink	Information	Messages
	High water temperature warning light (Red)	ON when power mode ON, then turns off when engine starts	When the temperature of the engine coolant is low it will lights off	
		<b>Flashes</b> when the coolant temperature rises	<b>Flashing</b> while driving Please travel slowly	
		<b>Lights</b> when temperature further rises	<b>Lights</b> , please stop the car in a safe place and allow the car to cool  Overheat P.270	
	Power system warning light	ON when power mode ON, then turns off when engine starts  <b>Lights</b> when the Power system is abnormal	<b>Lights while driving</b> Please have it inspected immediately by Honda dealer.	
	Direction indicator / flashing indicator	Corresponds to the direction indicator, whether left or right flashing  When you press the emergency flashing indicator light switch, left and right blink simultaneously	When the period of flashing not / flashing is fast, light bulb of the direction indicator has expired. Please immediately replace the bulb.  Exchange of bulb P.223, 227, 228	
	High beam indicator light	Lights when you turn ON high beam		

Warning light	Name	Situation to light / blink	Information	Messages
	Light lighting indicator	Lights up, when the light switch is ON(AUTO) when the vehicle width lamp lighting	When you turn OFF the power mode and open the drivers side door while turning ON the lights, a warning buzzer sounds.	
	Fog light lighting indicator ❖	Lights when turn on the fog lights		
	Low water temperature indicator (Blue)	Lights when the temperature of the engine coolant is low	When the indicator light is lit constantly in a state in which a sufficient warm-up, It can be considered as abnormal, such as temperature sensors. Please have it inspected by Honda dealer.	
	Security alarm system operation indicator ❖	Blinking when the security alarm system has been set	Security alarm system ❖ P.123	
	Immobilizer system indicator light	ON when power mode ON, then turns off when engine starts  Blinks when the immobilizer system is unable to recognize the information of the key	Moment of lighting is not a malfunction.  When flashing, you will not be able to start the power system. Please power OFF the system and turn ON again.  If it frequently flashing, please have it inspected at Honda dealer  It will be lit when, There is another key and metal near the POWER switch, immobilizer system may not read the information of the key.	

Warning light	Name	Situation to light / blink	Information	Messages
	Information indicator	When it detects an anomaly, a message is displayed in the multi-information display, with warning sound and lighting	<p>When a message is displayed on the multi-information display, indicator lights, with reference to the relevant page of the warning light, please make the necessary treatment.</p> <p>If the message is a warning is released, information (i) usually does not return to the display until you press the switch (▲/▼). When you press the information (i) switch (▲/▼) when it is on, you can be re-display the message.</p>	
	EV indicator	<p>ON when power mode ON, then turns off when engine starts</p> <p>Lights when running on the motor only</p>		
	READY indicator	After power system boots, it lights up when ready to travel	<p>It will turn off when the transmission warning light is illuminated.</p> <p>Start-up of power system P.173</p>	
	S mode indicator	<p>ON when power mode ON, then turns off when engine starts</p> <p>Lit by pressing the S mode switch</p>	S mode switch P.186	
	ECON indicator	<p>ON when power mode ON, then turns off when engine starts</p> <p>Lights up when you press the ECON switch</p>	ECON switch P.186	

Warning light	Name	Situation to light / blink	Information	Messages
	Shift position indicator	Displayed when power mode is ON mode  Lights in the current position	Shift operation P.180	
	Shift indicator ❖	When 7-speed manual shift mode, it displays the gear position Flashing and even if the shift operation does not shift	Shift operation P.180	
	M (7-speed manual shift mode) indicator	Turned on by pressing the S mode switch at the time of the 7-speed manual shift mode	Shift operation P.180	
	City brake active system indicator ❖	ON when power mode ON, then turns off when engine starts		
		Lights when the system is in customization state	City brake active system ❖P.200 How to customize P.99	
			Please remove the dirt in the washer and wiper while driving. Please wipe the dirt of the windshield near the laser sensor is parked in a safe place. When the dirt falls system restores.	
		Lights when there is something on windshield obstructing the sensor such as dirt, fog or snow.	Please use the defroster or clean the windshield	

		Lights when the temperature around the sensor is too high	Please lower the temperature by allowing the car to cool down.	
		Lights when something wrong with the system	The system does not work. Please have it inspected by Honda dealer.	